

# Your new dryer

**Congratulations** - You have chosen to buy a modern, high-quality Bosch domestic appliance. A distinctive feature of your dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.

## Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner. This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE). This directive provides the framework for the EU-wide collection and reuse of used appliances.

## Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Care and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Transport	8
■ Technical data	9
■ Optional accessories	9
■ What to do if...	10
■ Safety instructions	11

## Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.

**Do not leave children unsupervised near the dryer. Keep pets away from the dryer.**

## Preparing for installation, see page 8

**Never operate the dryer if it is damaged. Inform your after-sales service.**

**Only if your hands are dry. Only hold the plug by the plug casing.**

**Remove all objects from pockets. Pay particular attention to cigarette lighters. The drum must be empty before filling.**

## Before using the dryer for the first time run the drying cycle without any laundry -> page 7.

**Inspecting the dryer**

**Connecting the mains plug**

## Sorting and loading laundry

Remove all objects from pockets. Pay particular attention to cigarette lighters. The drum must be empty before filling.

## Selecting and adjusting the programme


Select the drying programme ...

... and adapt to individual requirements

For a detailed programme overview, -> page 7.

Press the Start/Stop button

Only operate the dryer with the fluff filter inserted.

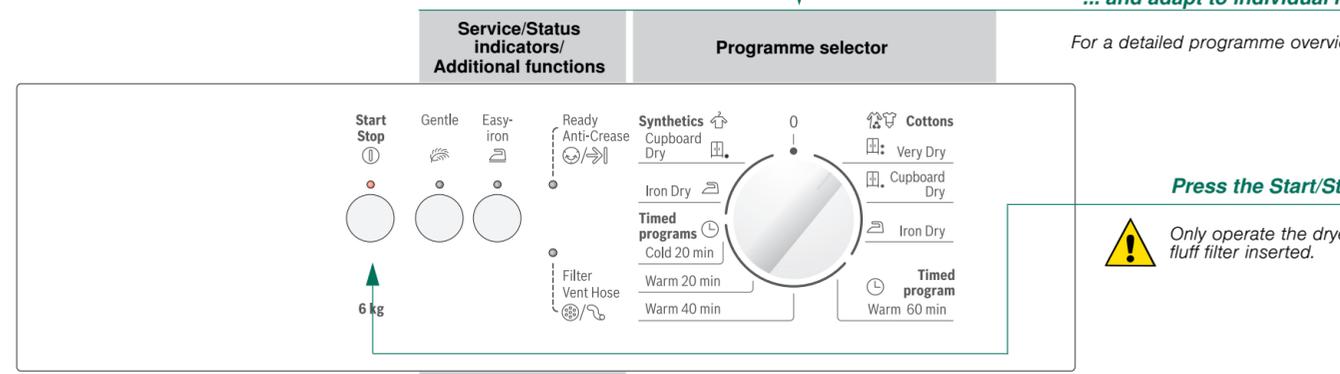

<b>Filter/Vent Hose</b>	Flashes -> clean the fluff filter, check the exhaust air duct -> page 6.
<b>Gentle</b>	Reduced temperature for delicate fabrics , e.g. polyacrylic, polyamide, elastane or acetate; for longer drying times.
<b>Easy-iron</b>	Reduces creasing and prolongs the anti-creasing phase after the programme has finished.

## Drying



## Drying

## Cleaning the fluff filter

- Clean the fluff filter after each drying cycle.
- Open the door and pull out the fluff filter.
  - Remove the fluff (brush your hand over the fluff filter). If the fluff filter is very dirty or blocked, wash it out with warm water and dry thoroughly.
  - Insert the fluff filter so that you hear it engage.
  - Remove fluff from door/door area.

## Switching off the dryer

Turn the programme selector to **o (Off)**. Do not leave laundry in the dryer.

## Removing the laundry

Your dryer has an automatic anti-crease function. The drum is moved at set intervals for 30 minutes after the programme has ended. Laundry remains loose and fluffy (for 90 minutes, if additional **Easy-iron** function is selected - depending on model).

## End of programme

as soon as the **Ready/Anti-Crease** indicator light flashes

## Interrupting the programme

Loading or removing laundry

**The drum and door may be hot.**

The drying programme can be interrupted briefly for loading or removing laundry. The selected programme must then continue to run to the end.

- Open the door; the drying process is interrupted.
- Load or remove laundry and close the door.
- If required, select a new programme and additional functions.
- Press the **Start/Stop** button.

## Notes on laundry ...

**Labelling of fabrics**

Follow the manufacturer's care instructions.

- Drying at a normal temperature.
- Drying at a lower temperature -> in addition, select **Gentle**.
- Do not machine dry.

Be sure to follow the safety instructions -> page 11!

For example, do not use the dryer for the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) -> they may crease.
- Laundry contaminated with oil.

**Before drying for the first time**

- Do not put any laundry in the machine. Turn the programme selector to Zeitprogramm (timer programme) (-> page 7) and select **Start/Stop**. At the end of the programme, turn the programme selector to **o (Off)**.

**Drying tips**

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. hand towels).
- Fasten zips, hooks and eyelets, button covers and tie together cloth belts, bands, etc.
- Do not overdry easy-care laundry -> risk of creasing. Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while -> the remaining moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried. -> Do not use the **Very Dry** programme.
- Starched laundry is not always suitable for dryers -> starch leaves behind a coating that adversely affects the drying operation.
- When washing the laundry that is to be tumble-dried, measure the fabric softener in accordance with the manufacturer's instructions.
- Using a timer programme with a small laundry load -> optimisation of the drying result.

## Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine -> the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended fill level but do not overload with laundry -> overview of programmes, page 7.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle -> page 4.

## Care and cleaning

**Dryer housing, control panel**

- Wipe off with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Remove detergent and cleaning agent residue immediately.

**Exhaust air duct**

Check the exhaust air duct. Clean the exhaust air duct every six months. Do not bend the exhaust air duct.

- Switch off the dryer and allow it to cool down.
- Disconnect the mains plug.
- Remove the exhaust air duct.
- Clean the exhaust air duct.
- Refit the exhaust air duct -> Installation instructions for exhaust air duct.

**Moisture sensors**

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

- Open the door.
- Clean the moisture sensors using a slightly damp sponge with a rough surface.

Do not use steel wool or abrasive materials.

After drying:	☑ Iron	☑ Cottons	☑ max. 6 kg	☑ Suitable for cottons, coloursets and linens.	☑ T-shirt	☑ Shirts	☑ Trousers	☑ Skirts/dresses	☑ Sportswear	☑ Work clothing	☑ Anoraks	☑ Terry towelling/ bath robe	☑ Underwear	☑ Socks	☑ Bed linen	☑ Table linen	☑ Terry towels	☑ Tea towels/ hand towels
	☑ Gentle iron	☑ Do not iron	☑ Mangle	☑ Cupboard Dry	☑ Very dry	☑ Easy-care	☑ Iron Dry	☑ Cupboard Dry	☑ Timed program	☑ Warm 160 min	☑ Warm 40 min	☑ Warm 20 min	☑ Cold 20 min					
				☑ For non-iron laundry made of synthetic fibres and mixed fabric, cotton.	☑ For pre-dried, quilted, delicate fabrics made of acrylic, or separate small items of laundry.	☑ For quilted, delicate fabrics made of acrylic or cotton	☑ For pre-dried, quilted, delicate fabrics made of acrylic, or separate small items of laundry.	☑ Also for subsequent drying.										

For more information, visit: <http://www.bosch-hausgeraete.de>  
**Bosch information centre:** [bosch-noteam@bsng.com](mailto:bosch-noteam@bsng.com)  
 07 09 / 90 00 45 82 06  
 Robert Bosch Hausgeräte GmbH  
 Carl-Wery-Str. 34  
 81739 München/Deutschland  
 WTA74100ZA




## Installation

– Scope of delivery: dryer, instruction manual and installation instructions.  
 – Check dryer for transport damage.  
 – The dryer is very heavy. Do not lift without assistance.  
 – Be careful to avoid sharp edges.  
 – Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.  
 – Do not install in a room where there is a risk of freezing.  
 – Freezing water can cause damage.  
 – If in doubt, have the appliance connected by a specialist.

**1. Setting up the dryer**  
 – The mains plug must always be accessible.  
 – Ensure that the appliance is installed on a clean, level and firm surface.  
 – Install the exhaust air duct -> Installation instructions for exhaust air duct.  
 – Keep the area around the dryer clean.  
 – Level the dryer using the front threaded feet.  
 – Do not unscrew the threaded feet more than 20 mm.  
 – On no account remove the threaded feet.

**2. Mains connection** For safety instructions, -> page 11.  
 – Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.  
 – The mains voltage and the voltage shown on the rating plate (-> page 9) must be the same.  
 – The connected load and necessary fuse protection are specified on the rating plate.

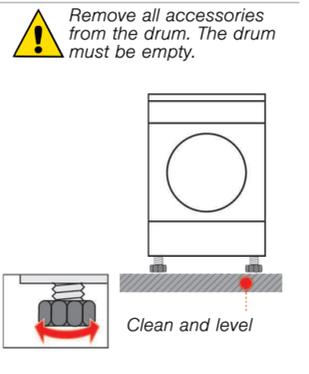

**Do not install the dryer behind a door or sliding door which could prevent or obstruct the dryer door from opening. This will prevent children from locking themselves in and risking their lives.**

**Remove all accessories from the drum. The drum must be empty.**

**Clean and level**

## Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm		
● <b>Weight</b>	approximately 35 kg		
● <b>Max. capacity</b>	6 kg		
● <b>Ambient temperature</b>	5 - 35 °C		
● <b>Connection voltage</b>	220 - 240 V		
● <b>Connected load</b>	2200 W		
● <b>Fuse protection</b>	10 A		
● <b>Product number</b>	-> Rating plate or inside of the door		
● <b>Production number</b>	-> Rating plate or inside of the door		
● <b>Consumption rates</b>	These are guide values determined under standard conditions. Deviations of up to 10% are possible.		
	Spin speed rpm (residual moisture)	Drying time** in min incl. 8 min cooling time	Energy consumption** in kWh
● <b>Cottons 6 kg</b>			
● Cupboard dry*	1400 (approx. 50 %)	100	3.00
	1000 (approx. 60 %)	105	3.25
	800 (approx. 70 %)	140	4.00
● Iron dry*	1400 (approx. 50 %)	78	2.20
	1000 (approx. 60 %)	80	2.40
	800 (approx. 70 %)	100	3.00
● <b>Easy-care 3 kg</b>			
● Cupboard dry*	800 (approx. 40 %)	38	1.00
	600 (approx. 50 %)	50	1.30

\*Test programmes according to DIN EN 61121.  
 \*\*The values may diverge from those specified depending on overvoltage and undervoltage, fabric type, composition of the laundry to be dried, residual moisture in the fabric and the amount of the load.

### Optional accessories

Ordering code

WTZ 1130 **Exhaust air duct set** (according to model)  
 The exhaust air is extracted via a hose.

WTZ 11311 **Washer-dryer stack connection set**  
 The dryer can be placed on top of a suitable washing machine with the same width and depth to save space.  
 The dryer **must be** fastened to the washing machine using this connection set.

WTZ 10290 **Built-under installation**  
 Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.



WMZ 20460 **Platform**  
 For improved loading and unloading. The basket located in the drawer can be used for carrying laundry.

## What to do if ...

● <b>Start/Stop indicator light does not light up.</b>	Mains plug plugged in? Programme selected? Check the socket fuse.
● <b>Filter/Vent/Hose indicator light flashes.</b>	Clean the fluff filter -> page 4. Exhaust air duct blocked or bent? Clean the exhaust air duct -> page 6. If necessary, clean the insect screen on the exhaust air pipe.
● <b>Dryer does not start.</b>	① <b>Start/Stop</b> button pressed? Door closed? Programme set?
● <b>Programme terminated shortly after starting.</b>	Ambient temperature greater than 5 °C?
● <b>Water is leaking out.</b>	Make sure the dryer is level.
● <b>The door opens by itself.</b>	Push the door closed until you hear it engage.
● <b>The required degree of dryness was not achieved or the drying time was too long.</b>	Clean the fluff filter -> page 4. Ambient temperature higher than 35 °C -> ventilate the room. Unsuitable programme selected? -> page 7. Dryer installed too closely to other objects? Provide adequate air circulation. Mains failure -> Restart the dryer. Fine layer of limescale on the moisture sensors. Clean the sensors -> page 6.
● <b>Laundry damp.</b>	Use the next drying programme up or the timer programme -> page 7. Warm laundry feels damper than it really is!
● <b>The humidity in the room has increased significantly.</b>	Make sure the room is sufficiently ventilated.
● <b>One or more indicator lights are flashing.</b>	Clean the fluff filter -> page 4. Check the installation conditions -> page 8. Exhaust air duct blocked or bent? Clean the exhaust air duct -> page 6. Switch off, allow to cool, switch back on and restart the programme.
● <b>Power cut.</b>	Remove the laundry from the dryer immediately and spread it out. Heat may escape.
● <b>Condensation in the exhaust air duct.</b>	Exhaust air duct too long? Check the maximum exhaust air duct length. Further information -> <i>Installation instructions for exhaust air duct.</i>
● <b>If you cannot rectify a fault yourself or a repair is necessary:</b>	– Turn the programme selector to <b>o (Off)</b> . – Remove the mains plug from the socket. – Call the after-sales service -> after-sales service directory.

## Safety instructions

● <b>Emergency ONLY use the dryer...</b>	– Pull the mains plug out of the socket immediately or disconnect the fuse. – In rooms inside the house. – for drying fabrics.
● <b>The dryer must NEVER...</b>	– Be used for other purposes than those described above. – Be modified in terms of its technology or attributes.
● <b>Dangers</b>	– The dryer must not be used by children or persons who have not been instructed in its use. – Do not leave children unsupervised near the dryer. – Keep pets away from the dryer. – Remove all objects from the pockets of garments. – Pay particular attention to cigarette lighters -> <b>risk of explosion</b> – Do not lean or sit on the door -> <b>risk of tipping</b> . – Open the door with care. Hot steam may escape.
● <b>Installation</b>	– Fasten down loose leads -> <b>risk of tripping</b> – Do not operate the dryer where there is a risk of frost. – The safety information in the separate installation instructions for the exhaust air duct must be observed without fail.
● <b>Mains connection</b>	– Connect the dryer to an AC earthed socket according to specifications, as otherwise it cannot be guaranteed that the appliance is completely safe. – The cable cross-section must be sufficient.  – Only use earth-leakage circuit breakers with the following symbol: – The mains plug and socket must be compatible. – Do not use multiple plugs/couplings and/or extension cables. – Do not touch or hold the mains plug with wet hands -> <b>risk of electric shock</b> . – Never pull the mains plug out of the socket by its cable. – Do not damage the mains lead -> <b>risk of electric shock</b> .
● <b>Operation</b>	– Only load the drum with items of laundry. – Check what has been loaded before switching the dryer on. – Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) -> <b>fire/explosion hazard</b> . – <b>Risk of danger</b> (e.g. coal dust or flour): do not use the dryer -> <b>risk of explosion</b> . – Do not put laundry containing foamed material/rubber in the dryer -> elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material. – Switch off the dryer once the programme has ended.
● <b>Defect</b>	– Do not use the dryer if it is defective or if you suspect that it is. – Repairs must only be carried out by the after-sales service. – Do not use the dryer with a faulty mains cable. In order to avoid risk, have the mains lead replaced only by our after-sales service.
● <b>Spare parts Disposal</b>	– Only use genuine spare parts and accessories for safety reasons. – Dryer: Disconnect the mains plug, then cut the mains cable off the appliance. Dispose of the appliance at a public disposal site. – Packaging: Do not allow children access to items of packaging -> <b>risk of suffocation</b> – All materials are environmentally friendly and reusable. Dispose of in an environmentally responsible manner.

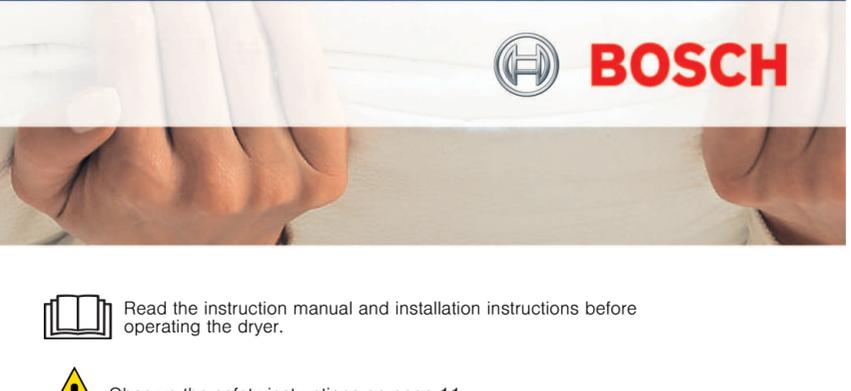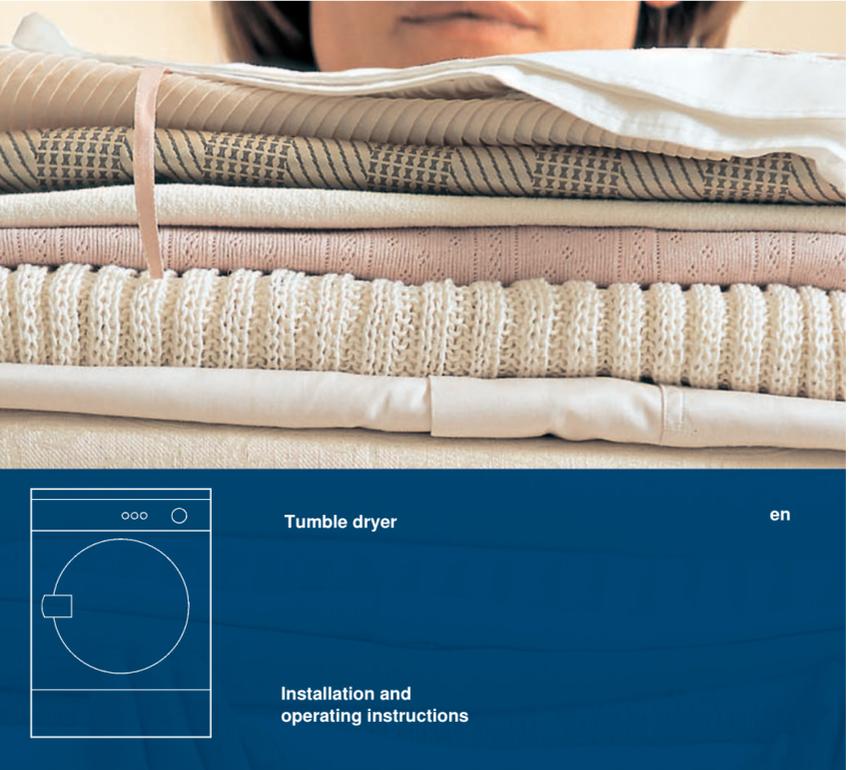

Read the instruction manual and installation instructions before operating the dryer.

Observe the safety instructions on page 11.

# Your new dryer

**Congratulations** - You have chosen to buy a modern, high-quality Bosch domestic appliance.  
A distinctive feature of your dryer is its low energy consumption.

Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.  
Should you have any questions, our after-sales service will be pleased to help.

## Environmentally responsible disposal

Dispose of packaging in an environmentally-responsible manner.

This appliance is designated according to European directive 2002/96/EC which governs waste electrical and electronic equipment (WEEE).

This directive provides the framework for the EU-wide collection and reuse of used appliances.

## Contents

	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Care and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Transport	8
■ Technical data	9
■ Optional accessories	9
■ What to do if...	10
■ Safety instructions	11

## Intended use

- exclusively for domestic use,
- only for drying fabrics which have been washed using water.



Do not leave children unsupervised near the dryer.  
Keep pets away from the dryer.

## Preparing for installation, see page 8

Before run the d



Never operate the dryer if it is damaged.  
Inform your after-sales service.



Only if your hands are dry.  
Only hold the plug by the plug casing.



## Sorting and loading

Remove all objects from pockets.  
Pay particular attention to cigarette lighters.  
The drum must be empty before filling.

## Selecting and adjusting the programme

Select the d


... and adapt to individ

For a detailed programme

Press the S



Only operate fluff filter inser

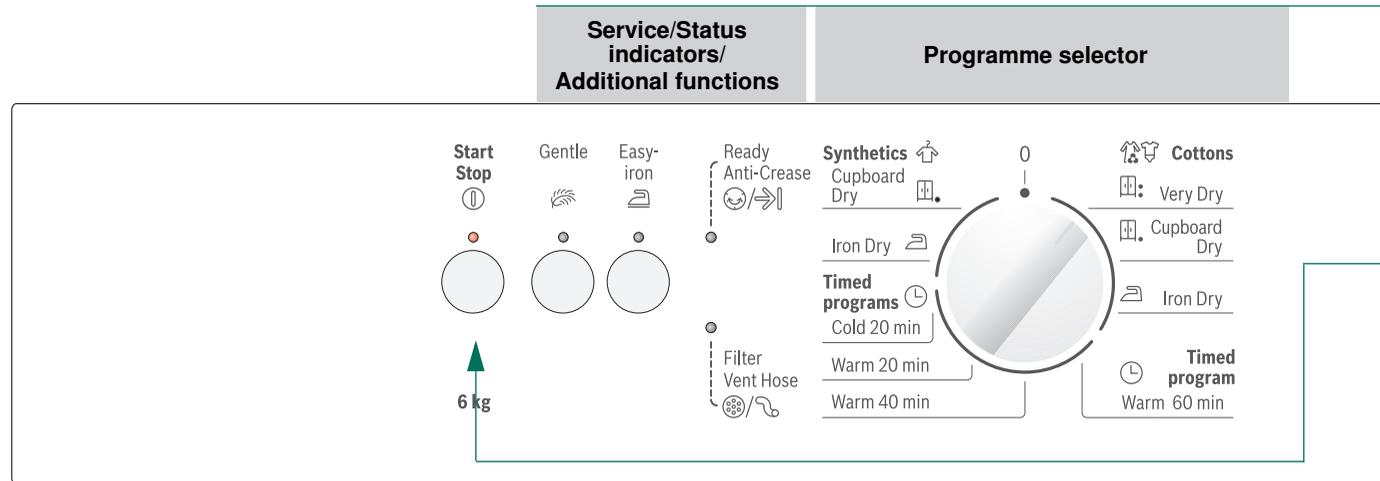

<b>Filter/Vent Hose</b>	Flashes -> clean the fluff filter, check the exhaust air duct -> page 6.
<b>Gentle</b>	Reduced temperature for delicate fabrics  , e.g. polyacrylic, polyamide, elastan, acetate; for longer drying times.
<b>Easy-iron</b>	Reduces creasing and prolongs the anti-creasing phase after the programme finished.

Using the dryer for the first time  
Drying cycle without any laundry -> page 7.

Inspecting the dryer

Connecting the mains plug

Loading laundry

Choosing the programme

Starting the drying programme ...

Individual requirements

For a complete overview, -> page 7.

Pressing the Start/Stop button

Starting the dryer with the Start/Stop button.

or

has

# Drying



1

2

3

# Drying



## Cleaning the fluff filter

Clean the fluff filter after each drying cycle.

1. Open the door and pull out the fluff filter.
2. Remove the fluff (brush your hand over the fluff filter).  
If the fluff filter is very dirty or blocked, wash it out with warm water and dry thoroughly.
3. Insert the fluff filter so that you hear it engage.
4. Remove fluff from door/door area.



## Switching off the dryer

Turn the programme selector to **o (Off)**.  
Do not leave laundry in the dryer.



## Removing the laundry

Your dryer has an automatic anti-crease function. The drum is moved at set intervals for 30 minutes after the programme has ended. Laundry remains loose and fluffy (for 90 minutes, if additional **Easy-iron** function is selected - depending on model).

**End of programme** as soon as the **Ready/Anti-Crease** / indicator light flashes



**Interrupting the programme** Loading or removing laundry



The drum and door may be hot.



The drying programme can be interrupted briefly for loading or removing laundry. The selected programme must then continue to run to the end.

1. Open the door; the drying process is interrupted.
2. Load or remove laundry and close the door.
3. If required, select a new programme and additional functions.
4. Press the **Start/Stop** button.

# Notes on laundry ...



## Labelling of fabrics

Follow the manufacturer's care instructions.

- Drying at a normal temperature.
- Drying at a lower temperature -> in addition, select **Gentle** .
- Do not machine dry.



Be sure to follow the safety instructions -> page 11!

For example, do not use the dryer for the following fabrics:

- Airtight fabrics (e.g. rubber-coated fabrics).
- Delicate materials (silk, curtains made from synthetic material) -> they may crease.
- Laundry contaminated with oil.



## Before drying for the first time

- Do not put any laundry in the machine. Turn the programme selector to Zeitprogramm (timer programme) (-> page 7) and select **Start/Stop**. At the end of the programme, turn the programme selector to **o (Off)**.



## Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small fabrics (e.g. baby socks) together with large items of laundry (e.g. hand towels).
- Fasten zips, hooks and eyelets, button covers and tie together cloth belts, bands, etc.
- Do not overdry easy-care laundry -> risk of creasing  
Allow laundry to finish drying in the air.
- Do not iron laundry immediately after drying, fold items up and leave for a while  
-> the remaining moisture will then be distributed evenly.
- Knitted fabrics (e.g. T-shirts, jerseys) often shrink slightly the first time they are tumble-dried.  
-> Do not use the **Very Dry**  programme.
- Starched laundry is not always suitable for dryers -> starch leaves behind a coating that adversely affects the drying operation.
- When washing the laundry that is to be tumble-dried, measure the fabric softener in accordance with the manufacturer's instructions.
- Using a timer programme with a small laundry load -> optimisation of the drying result.

## Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine -> the higher the spin speed, the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Use the maximum recommended fill level but do not overload with laundry  
-> overview of programmes, page 7.
- Make sure the room is well ventilated during drying.
- Clean the fluff filter after every drying cycle -> page 4.

# Care and cleaning



Only when the appliance is switched off.



## Dryer housing, control panel

- Wipe off with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Remove detergent and cleaning agent residue immediately.



## Exhaust air duct

Check the exhaust air duct. Clean the exhaust air duct every six months. Do not bend the exhaust air duct.

1. Switch off the dryer and allow it to cool down.
2. Disconnect the mains plug.
3. Remove the exhaust air duct.
4. Clean the exhaust air duct.
5. Refit the exhaust air duct -> Installation instructions for exhaust air duct.



## Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of limescale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors using a slightly damp sponge with a rough surface.



Do not use steel wool or abrasive materials.



	T-shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothing	Anoraks	Terry towelling/ bath robe	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ hand towels
<b>After drying:</b>														
☐ iron	☑					☑					☑	☑	☑	☑
☐ gentle iron														
☐ do not iron														
☐ mangle														
<b>☐ Cottons</b>	Suitable for cottons, coloureds and linens.													
☐ Iron Dry	☑		☑	☑		☑			☑	☑	☑	☑	☑	☑
☐ Cupboard Dry														
☐ Very dry														
<b>☐ Easy-care</b>	For non-iron laundry made of synthetic fibres and mixed fabric, cotton.													
☐ Iron Dry	☑		☑	☑		☑			☑	☑	☑	☑	☑	☑
☐ Cupboard Dry														
<b>☐ Timed program</b>	For pre-dried, quilted, delicate fabrics made of acrylic, or separate small items of laundry.													
Warm 60 min														
Warm 40 min														
Warm 20 min														
Cold 20 min														
	For quilted, delicate fabrics made of acrylic or cotton													
	For pre-dried, quilted, delicate fabrics made of acrylic, or separate small items of laundry.													
	Also for subsequent drying.													

For more information, visit: <http://www.bosch-hausgeraete.de>

**Bosch information centre:** [bosch-infoteam@bshg.com](mailto:bosch-infoteam@bshg.com)

0709 / 9000458206



Robert Bosch Hausgeräte GmbH  
Carl-Wery-Str. 34  
81739 München/Deutschland

WTA74100ZA

## Installation

- Scope of delivery: dryer, instruction manual and installation instructions.
- Check dryer for transport damage.
- The dryer is very heavy. Do not lift without assistance.
- Be careful to avoid sharp edges.
- Do not lift the dryer by protruding parts (e.g. the door) - risk of breakage.
- Do not install in a room where there is a risk of freezing. Freezing water can cause damage.
- If in doubt, have the appliance connected by a specialist.

1.

### Setting up the dryer


 
- The mains plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and firm surface.
- Install the exhaust air duct -> Installation instructions for exhaust air duct.
- Keep the area around the dryer clean.
- Level the dryer using the front threaded feet.
- Do not unscrew the threaded feet more than 20 mm. On no account remove the threaded feet.



Remove all accessories from the drum. The drum must be empty.



Do not install the dryer behind a door or sliding door which could prevent or obstruct the dryer door from opening. This will prevent children from locking themselves in and risking their lives.

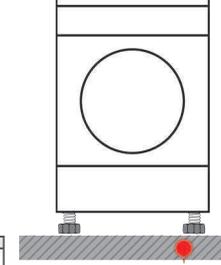

Clean and level

2.

### Mains connection For safety instructions, -> page 11.

- Connect to an AC earthed socket. If in doubt have the socket checked by a specialist.
- The mains voltage and the voltage shown on the rating plate (-> page 9) must be the same.
- The connected load and necessary fuse protection are specified on the rating plate.

## Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm
<b>Weight</b>	approximately 35 kg
<b>Max. capacity</b>	6 kg
<b>Ambient temperature</b>	5 - 35 °C
<b>Connection voltage</b>	220 - 240 V
<b>Connected load</b>	2200 W
<b>Fuse protection</b>	10 A
<b>Product number</b>	
<b>Production number</b>	-> Rating plate or inside of the door

You can find the rating plate on the back of the dryer.

● <b>Consumption rates</b>	These are guide values determined under standard conditions. Deviations of up to 10% are possible.		
	Spin speed rpm (residual moisture)	Drying time** in min incl. 8 min cooling time	Energy consumption** in kWh
● <b>Cottons 6 kg</b> Cupboard dry*	1400 (approx. 50 %)	100	3.00
	1000 (approx. 60 %)	105	3.25
	800 (approx. 70 %)	140	4.00
● Iron dry*	1400 (approx. 50 %)	78	2.20
	1000 (approx. 60 %)	80	2.40
	800 (approx. 70 %)	100	3.00
● <b>Easy-care 3 kg</b> Cupboard dry*	800 (approx. 40 %)	38	1.00
	600 (approx. 50 %)	50	1.30

\*Test programmes according to DIN EN 61121.

\*\*The values may diverge from those specified depending on overvoltage and undervoltage, fabric type, composition of the laundry to be dried, residual moisture in the fabric and the amount of the load.

## Optional accessories

Ordering  
code

WTZ 1130 **Exhaust air duct set** (according to model)  
The exhaust air is extracted via a hose.

WTZ 11311 **Washer-dryer stack connection set**  
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space.  
The dryer **must be** fastened to the washing machine using this connection set.

WTZ 10290 **Built-under installation**  
Instead of the appliance covering plate, you **must** have a metal cover fitted by a specialist.

WMZ 20460 **Platform**  
For improved loading and unloading. The basket located in the drawer can be used for carrying laundry.

## What to do if ...





Repairs must only be carried out by the after-sales service or an authorised specialist. Before contacting the after-sales service, please check whether you can remedy the fault yourself. When you contact the after-sales service, you will be charged call-out costs if a technician is required, even within the warranty period. You can find your nearest after-sales centre from the list enclosed. When contacting the after-sales service, please quote the product number (E no.) and the production number (FD) of the appliance ( -> inside of the door).

● ① <b>Start/Stop</b> indicator light does not light up.	Mains plug plugged in? Programme selected? Check the socket fuse.
● <b>Filter/Vent/Hose</b> indicator light flashes.	Clean the fluff filter -> <i>page 4</i> . Exhaust air duct blocked or bent? Clean the exhaust air duct -> <i>page 6</i> . If necessary, clean the insect screen on the exhaust air pipe.
● Dryer does not start.	① <b>Start/Stop</b> button pressed? Door closed? Programme set?
● Programme terminated shortly after starting.	Ambient temperature greater than 5 °C?
● Water is leaking out.	Make sure the dryer is level.
● The door opens by itself.	Push the door closed until you hear it engage.
● The required degree of dryness was not achieved or the drying time was too long.	Clean the fluff filter -> <i>page 4</i> . Ambient temperature higher than 35 °C -> ventilate the room. Unsuitable programme selected? -> <i>page 7</i> . Dryer installed too closely to other objects? Provide adequate air circulation. Mains failure -> Restart the dryer. Fine layer of limescale on the moisture sensors. Clean the sensors -> <i>page 6</i> .
● Laundry damp.	Use the next drying programme up or the timer programme -> <i>page 7</i> . Warm laundry feels damper than it really is!
● The humidity in the room has increased significantly.	Make sure the room is sufficiently ventilated.
● One or more indicator lights are flashing.	Clean the fluff filter -> <i>page 4</i> . Check the installation conditions -> <i>page 8</i> . Exhaust air duct blocked or bent? Clean the exhaust air duct -> <i>page 6</i> . Switch off, allow to cool, switch back on and restart the programme.
● Power cut.	Remove the laundry from the dryer immediately and spread it out. Heat may escape.
● Condensation in the exhaust air duct.	Exhaust air duct too long? Check the maximum exhaust air duct length. Further information -> <i>Installation instructions for exhaust air duct</i> .
● If you cannot rectify a fault yourself or a repair is necessary:	- Turn the programme selector to <b>o (Off)</b> . - Remove the mains plug from the socket. - Call the after-sales service -> after-sales service directory.

# Safety instructions



- Emergency**  
**ONLY use the dryer...**
- Pull the mains plug out of the socket immediately or disconnect the fuse.
  - In rooms inside the house.
  - for drying fabrics.
- The dryer must NEVER...**
- Be used for other purposes than those described above.
  - Be modified in terms of its technology or attributes.
- Dangers**
- The dryer must not be used by children or persons who have not been instructed in its use.
  - Do not leave children unsupervised near the dryer.
  - Keep pets away from the dryer.
  - Remove all objects from the pockets of garments.  
Pay particular attention to cigarette lighters -> **risk of explosion**
  - Do not lean or sit on the door -> **risk of tipping.**
  - Open the door with care. Hot steam may escape.
- Installation**
- Fasten down loose leads -> **risk of tripping**
  - Do not operate the dryer where there is a risk of frost.
  - The safety information in the separate installation instructions for the exhaust air duct must be observed without fail.
- Mains connection**
- Connect the dryer to an AC earthed socket according to specifications, as otherwise it cannot be guaranteed that the appliance is completely safe.
  - The cable cross-section must be sufficient.
  - Only use earth-leakage circuit breakers with the following symbol: 
  - The mains plug and socket must be compatible.
  - Do not use multiple plugs/couplings and/or extension cables.
  - Do not touch or hold the mains plug with wet hands -> **risk of electric shock.**
  - Never pull the mains plug out of the socket by its cable.
  - Do not damage the mains lead -> **risk of electric shock.**
- Operation**
- Only load the drum with items of laundry.  
Check what has been loaded before switching the dryer on.
  - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) -> **fire/explosion hazard.**
  - Dust danger (e.g. coal dust or flour): do not use the dryer  
-> **risk of explosion.**
  - Do not put laundry containing foamed material/rubber in the dryer -> elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
  - Switch off the dryer once the programme has ended.
- Defect**
- Do not use the dryer if it is defective or if you suspect that it is.  
Repairs must only be carried out by the after-sales service.
  - Do not use the dryer with a faulty mains cable. In order to avoid risk, have the mains lead replaced only by our after-sales service.
- Spare parts**
- Only use genuine spare parts and accessories for safety reasons.
- Disposal**
- Dryer: Disconnect the mains plug, then cut the mains cable off the appliance. Dispose of the appliance at a public disposal site.
  - Packaging: Do not allow children access to items of packaging  
-> **risk of suffocation**
  - All materials are environmentally friendly and reusable. Dispose of in an environmentally responsible manner.

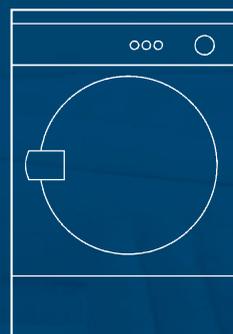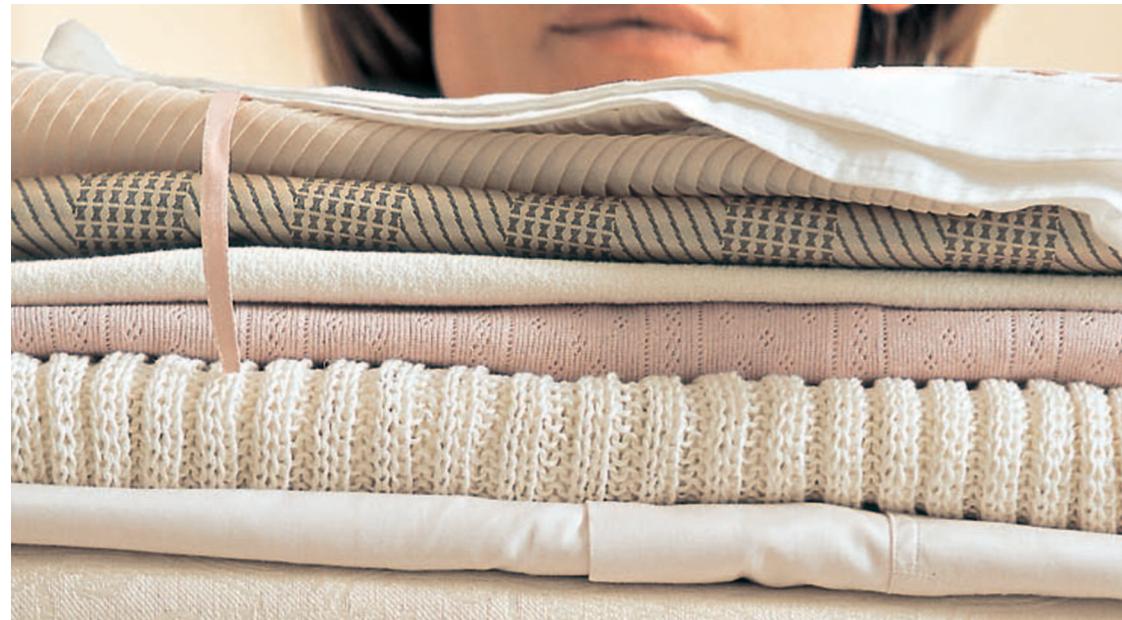

Tumble dryer

en

Installation and  
operating instructions



**BOSCH**



Read the instruction manual and installation instructions before operating the dryer.



Observe the safety instructions on page 11.