



User Guide Manual

SBS66....

Code : ZY600-4

Disposal of Used Electrical & Electronic Equipment



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste.

In the European Union and Other European countries there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potential hazards to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources.

Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

RoHS (Directive 2011/65/EU) Compliant



This product is environmentally sound and sustainable free from Pb, Cd, Cr+6, Hg, PBBs and PBDEs restricted in accordance with the Directive.

OBSERVE AMBIENT TEMPERATURE

This refrigerator is designed to operate in ambient temperature specified by its category, which is marked on the rating plate

Climatic category	Ambient temperature from...to
SN	+ 10°C to + 32°C
N	+ 16°C to + 32°C
ST	+ 16°C to + 38°C
T	+ 16°C to + 43°C

NOTE

Internal temperature may be affected by such factors as the location of the refrigerator, ambient temperature and frequency of the door opening.

SAFETY WARNING (R-600a Models Only)



This appliance contains a certain amount of isobutane refrigerant (R600a) a natural gas with high environmental compatibility that is, however, also combustible.

when transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.

Refrigerant squirting out of the pipes could ignite or cause an eye injury. If a leak is detected, avoid any naked flames or potential sources of ignition and air the room in which appliance is standing for several minutes.

- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used. The room must be 1 m³ in size for every 8g of R600a refrigerant inside the appliance. The amount of refrigerant is shown on the identification plate inside the appliance.
- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer.

Contents

Be sure to keep for safety	1~2
Installation Guide	3
Control Panel	4
Temperature Control	5
How to use Interior Parts	6~7
How to use the Dispenser	8
How to use the Automatic Icemaker	8
Care & Cleaning	9
Before You Call for Service	10
Something strange? Don't worry.	
Here is the answer	11
Installation Preparation	12
If the refrigerator can not pass through a door during installation, follow these steps	12
Refrigerator Leveling & Door Adjustment (if needed)	14
How to install Water Line	15

Be sure to keep for safety!

Read these safety instructions thoroughly and carefully before using. Please keep this user guide on hand for future reference.



Indicates the possibility of danger of death or serious injury.



Indicates the possibility of risk of personal injury or material damage.

Other Signs



DO NOT remove or disassemble!



Be sure to unplug from outlet/mains!



NO. DO NOT...



Be sure to keep and follow!

Caution

1. If the supply cord becomes damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

WARNING



Never let the power cord be crushed by the refrigerator itself or other (heavy) objects. Never bend power cord excessively.

- If the cord is damaged or peeled, it can be a cause of fire and electric shock.



Do not plug several appliances into the same wall outlet.

- It can be a cause of overheating and/or fire. Use an exclusive grounding receptacle for the refrigerator.



Never hold the power cord or plug with wet hands.

- There is a risk of electric shock.



Never use a damaged power cord or plug, or loose main socket.

- There is a risk of fire, electric shock or serious injury.



Be sure to ground. Check if your wall outlet is grounded (earthed).

- There is a risk of electric shock hazards.



Never unplug by pulling only the power cord wire. Always grip the plug firmly.



Let the cord from the plug outlet be directed downwards.

- If it is directed up, the cord near the plug is bent and can be damaged, which can cause an electric shock or fire.



Do not install the refrigerator on a wet floor or in a place with excessive humidity and moisture.

- Electric insulation gets weakened, resulting in a risk of electric shock hazards.



Never let the power cord touch or pass over heating appliances.

- Power cord can be damaged, resulting in a risk of electric shock hazards.



Check if plug is loose from the wall outlet.

- Electric insulation gets weakened, resulting in a risk of electric shock hazards.



Never pour or spray water into the refrigerator (both interior and exterior).

- Electric insulation gets weakened, resulting in a risk of electric shock hazards.



Do not place containers with water or liquid on top of refrigerator.

- Water can spill into the refrigerator and can cause electric shock hazards or damage.



Do not let children hang on the refrigerator doors.

- Refrigerator can fall and harm them.



Do not move or remove compartment shelves/pockets while foods and containers are on them.

- Hard containers (of glass, metal etc.) can fall to hurt you and can break glass shelf and interior parts.



Never repair or disassemble or amend the refrigerator on your own

- There is a risk of personal injury or damage to the refrigerator. It is recommended that any service be carried out by a qualified person.

-  Never store any flammable gas or liquid in the refrigerator.
-  Never use flammable gas, benzene, thinners, gasoline, spray etc. near the refrigerator.
 - There is a risk of fire, explosion and personal injury or damage.
-  If a gas leak is found near the refrigerator or in the kitchen, ventilate it immediately without touching the power plug or refrigerator.
-  Do not store medicine or academic research samples which require strict temperature control in the refrigerator.
-  Never insert fingers or hands into the bottom of the refrigerator, especially into the bottom at the back.
 - You can be hurt by sharp metal edges or can receive an electric shock.
-  Do not change fuse or LED lamp on your own. Call the service agent to change them.
-  When you find the power cord damaged or cut, call the service agent immediately.
-  When you get rid of your old refrigerator, be sure to remove the door packings first.
 - Children can be entrapped and suffocated in an abandoned refrigerator.
-  Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  Do not use mechanical devices or other means to accelerate the defrosting process.
-  Do not use electrical appliances inside the food storage compartments of the appliance.
-  The ice-maker in the freezer can be only replaced by the manufacturer or the service agent.
-  When the freezer door is open, do not press the dispenser lever.
-  Connect to drinkable water supply only.

CAUTION

-  Be sure to unplug the refrigerator when it is not going to be used for a long time.
-  Never touch foods and containers especially of metal with wet hands in the freezer compartment.
 - You can be hurt by chilblains or cold burns.
-  Never eat any decayed or deteriorated food at all.
 - Foods stored too long in the refrigerator can deteriorate and become decayed.
-  Never place bottles and containers of glass in the freezer compartment.
 - Glass containers and bottles can break and can hurt you.
-  When moving the refrigerator (horizontally or tilted), more than 2 people are required to hold it.
(One to hold top back handles, the other to hold the bottom holder.)
If other parts are held instead, it is very dangerous and likely to slip.
-  Be sure to turn up the wheel first before moving the refrigerator.
 - The wheels can damage or scratch the floor.
If you are moving it for a long distance, never forget to fasten the interior parts tightly with tapes.
 - Otherwise, the parts can collide and break each other.
-  Refrigerator door might not open when attempted immediately after using the freezer compartment. This is due to outside air entering the refrigerator. This does not mean it is broken. Please try again after 30 seconds.

Installation Guide

* Read these safety instructions carefully before use and follow precautions for your safety.

Precautions in installation and power connection

■ To prevent fire, electric shock or leakage.

① Never install the refrigerator on a wet, watery floor or where water can gather easily.

② Check the following before power connection.

- Connect power plug only to a grounded wall socket (an earthed mains).
- Do not plug refrigerator power together with other appliances to the same socket.

③ Do not use an adapter plug or an extension cord.


④ Do not let the power cord be crushed by other (heavy) objects .

- ※ If you hear a strange noise, strong chemical odour or find smoke etc. from the refrigerator after the power is plugged in, pull out the plug immediately and call the service agent.
- ※ Wait about 5 minutes before you plug-in again in order to prevent any damage to the compressor and electrical devices of refrigerator.
- ※ Wait 2~3 hours until the inside gets cold enough after the first power plug-in, then store foods inside. (There can be some smell of plastic parts on initial operation of the refrigerator after plugging in. The smell fades away as the refrigerator works and doors are opened and closed.)

Precautions in use

■ To prevent personal injury, fire, electric shock etc. read this user guide carefully before use and keep it at hand for any reference.

■ Accessories

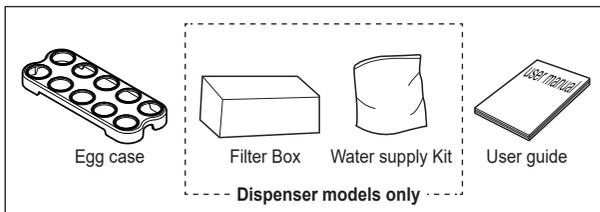

Control Panel

◆ Dispenser Model



1. **Freezer Temp.** Hold 3 sec for Recommended Temp.
 - 1) Selection button for freezer compartment temperature.
 - 2) Tap the button for 3 sec, it'll set -18°C which is a recommended temperature.
2. **Eco Mode** Eco Mode button
Conserve energy with the Eco Mode. Activate and deactivate the function by pressing the button.
3. **Water** Water selection button.
4. **Ice Type** Ice Type
Hold 3 sec for Lock / Unlock
 - 1) Ice cubes/Crushed ice selection button.
 - 2) Ice-maker lock button.
Press "Ice Type" button for 3 seconds to lock the ice-maker.
5. **Fridge Temp.** Hold 3 sec for Recommended Temp.
 - 1) Selection button for fridge compartment temperature.
 - 2) Tap the button for 3 sec, it'll set 3°C which is a recommended temperature.
6. **Child Lock** Hold 3 sec for Unlock
Child Lock button for control panel
Press button to activate and prevent settings from being unintentionally changed. To release the button, press for longer than 3 seconds. The display goes out.

7. Symbols on the display panel

-  Eco mode is switched on.
-  "Filter change required" display. After changing the filter, press the "Eco mode" button for 3 seconds.
-  Water dispenser function is switched on.
-  Ice cubes/Crushed ice dispenser function is switched on.
-  "Ice-maker locked" display
-  "Control panel locked" display

◆ Non Dispenser Model



1.  Displays the button 'Lock'
2. **Freezer Temp.** Freezer Temp. button
Temperature selection button for freezer compartment.
3. **Child Lock** Hold 3 sec for Unlock
Child Lock button for control panel
Press button to activate and prevent settings from being unintentionally changed. To release the button, press for longer than 3 seconds. The display goes out.
4. **Fridge Temp.** Fridge Temp. button
Temperature selection button for fridge compartment.

5. Symbols on the display panel

-  "Super" freeze/cool display
-  "Control panel locked" display



- In case either the freezer or refrigerator door is left open for more than a minute, door alarm rings for 5 minutes with 1 minute intervals.
- Display off function
 - 20 seconds after no buttons or doors are operated by customer, all the display LED go out.
 - Under the LED off status, it returns to normal display mode when customers operate buttons or doors.
- System off function (power off function)
 - You can stop operating the appliance without unplugging especially on holidays.
 - Pressing **Freezer Temp.** and **Fridge Temp.** button at the same time for 5 seconds will turn the appliance off.
 - Under the 'off' mode, freezer and refrigerator temperature displays "oFF".
 - Other LED lights go out and all the operation of your appliance halt.
 - Conversely, pressing **Freezer Temp.** and **Fridge Temp.** button together for 5 seconds will switch it back on.


Temperature Control

* When this refrigerator is first plugged in, the temperature mode is set to [Middle].

◆ Dispenser Model



◆ Non Dispenser Model

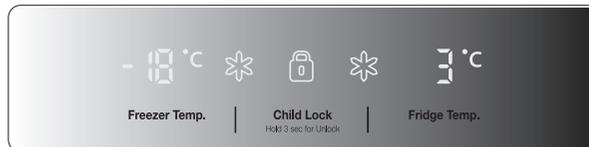


Freezer Compartment

Push the Freezer Temp. button and the setting temperature changes as the figure shows.

>>> Sequential Temperature Change <<<

-18°C) -19°C) -20°C) -21°C) -22°C) ^{Super}) -15°C) -16°C) -17°C



Faster Freezing...

When you want faster freezing, push the Freezer Temp. button, until ' Super ' LED turns on. Just push the button again to release.

Freezer Compartment

Push the Freezer Temp. button and the setting temperature changes as the figure shows.

>>> Sequential Temperature Change <<<

-18°C) -19°C) -20°C) -21°C) -22°C) ^{Super}) -15°C) -16°C) -17°C



Faster Freezing...

When you want faster freezing, push the Freezer Temp. button, until ' Super ' LED turns on. Just push the button again to release.

Refrigerator Compartment

Push the Fridge Temp. button and the setting temperature changes as the figure shows.

>>> Sequential Temperature Change <<<

-3°C) 2°C) 1°C) ^{Super}) 8°C) 7°C) 6°C) 5°C) 4°C



Faster Cooling or Refrigeration

When you want faster cooling or refrigeration , push the Fridge Temp. button, until ' Super ' LED turns on. Just push the button again to release.

Refrigerator Compartment

Push the Fridge Temp. button and the setting temperature changes as the figure shows.

>>> Sequential Temperature Change <<<

-3°C) 2°C) 1°C) ^{Super}) 8°C) 7°C) 6°C) 5°C) 4°C



Faster Cooling or Refrigeration

When you want faster cooling or refrigeration , push the Fridge Temp. button, until ' Super ' LED turns on. Just push the button again to release.




Caution


Foods in the refrigerator can be frozen if the ambient temperature of the refrigerator is below 5°C.

How to use the interior parts

◆ Non Dispenser Model

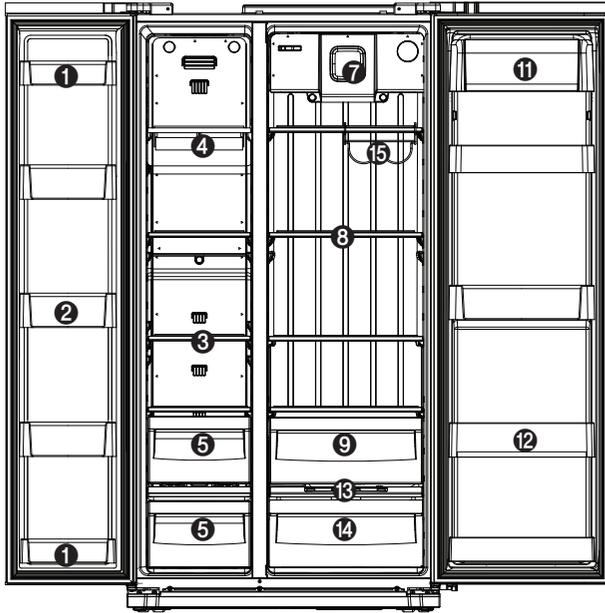

◆ Dispenser Model

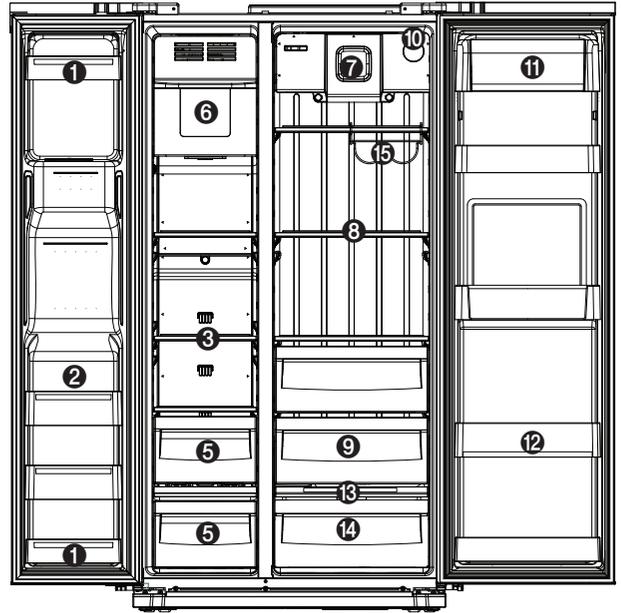

* This instruction manual refers to several models. The real features are model dependent.

1. Door storage compartment

for short-term storage of food and ice cream.

2. Door storage compartment

for storing frozen food.

3. Freezer shelf

for storing frozen foods such as meat, fish, ice-cream.

4. Ice cube tray (not all models)

5. Freezer case

for storing dried or fish, meat for long periods of time

6. Ice maker & storage

(not all models)

7. Antibacterial air feshener

8. Refrigerator shelf

for storing common foods.

9. Vegetable case

10. Water filter (not all models)

11. Dairy pocket (not all models)

for storing dairy product

12. Refreshment pocket

for storing refrigerating foods, milk, juice, beer bottle etc.

13. Moist-Air (humidity) Controller

to create the perfect storage climate by adjusting the control between fruit and vegetables.

14. V-Healthy LED

it operates automatically at regular intervals in order to keep vegetables more fresh and longer.

15. Wine shelf (option)


Caution

- Do not touch or hold with wet hands foods (food container) in the freezer compartment.
☞ There is a risk of chilblains (cold burns).
- Do not store medicine, academic research samples etc. in the refrigerator.
- Do not store vegetables in the chilled room, as they can be frozen.


Food Storage Tips



Wash foods before storing.

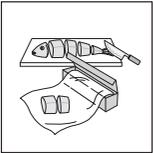


Divide and separate foods into smaller pieces.

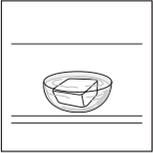

Place watery foods or foods with a lot of moisture in front shelves (close to door side). If they are placed close to the cold air spout, they can be frozen.




Warm or hot foods should be cooled down enough before storing to reduce power consumption and to enhance refrigeration performance.

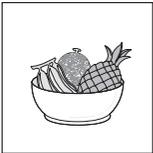

Be careful in storing tropical fruits such as bananas, pineapples and tomatoes, as they can easily deteriorate in lower temperatures.




Keep enough space between foods. If too tight or too close, cold air circulation is hindered, resulting in poor refrigeration.

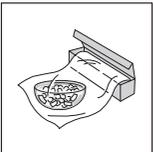

Never forget to cover or wrap foods to prevent odours.

Moist-Air (humidity) Controller




You can control the amount of humidity by adjusting the control to any setting between fruit and vegetables.

- Slide the humidity control toward "Fruit" to release moist air from crisper for best storage of fruit.
- Slide the humidity control toward "Vegetables" to keep moist air in the crisper for best storage of fresh, leafy vegetables.

How to use the Dispenser

Select the "Water" or "Ice Type" button and push the lever smoothly with your cup.
Your selection will come out 1~2 seconds later.

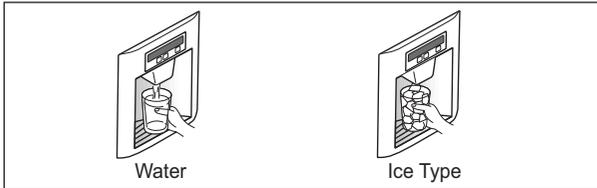

Caution

- Avoid using thin fragile cups or crystal glasses when taking icecubes.
- For your safety, never insert your fingers or other tools into the dispenser outlet.
- If you find the ice cubes are discolored, stop using the dispenser and call the service agent.

How to use the Automatic Icemaker (For dispenser models)

- About 10 icecubes (14~15 times a day) are made at one time. If the ice storage case is full, icemaking stops.
- It is normal for the icemaker to make banging sounds when the icecubes are falling into the ice storage case.
- To prevent bad odours or smells, regularly clean the icecubes storage case.
- If the amount of ice in the storage case is not sufficient, the ice may not be dispensed. Wait a day or so to make more ice.
- If the ice does not dispense easily, ensure the dispenser outlet is not blocked.

In case the icemaker doesn't work


If the icecubes get stuck and not dispensed

- Pull out the ice storage case and separate any icecubes that may have stuck together.
- If the amount of water which is supplied to the icemaker needs adjusting, call for the service agent.

In case of power failure

- The icecubes in the case may melt to flow down to the freezer room.
- If many hours of power failure is predicted, pull out the case, remove the icecubes in it and replace it back when power resumes.

Care & Cleaning

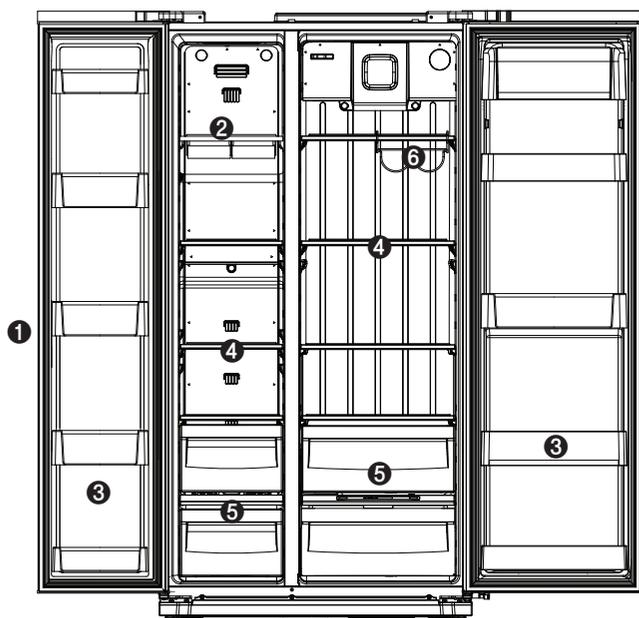


Be sure to unplug first

* The real features are model dependent.


1 Dispenser Water Shelf

- Clean the water shelf regularly.

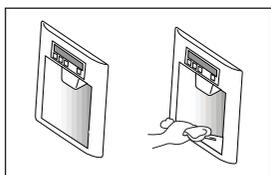


4 Freezer & Refrigerator Shelves

- Open the doors fully, then pull the shelves forward to remove.

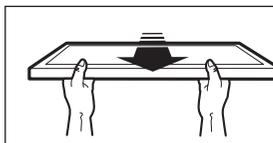


2 Icecubes storage Case

- Removing: Pull up the case assembly forward to remove.
- Replacing: Fit to the side grooves and insert to the end. If it is difficult to fully insert the case, remove it, rotate the swirl coil in the case or drive mechanism a quarter turn and insert again. Do not store the icecubes for too long.

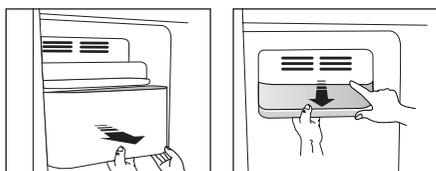


5 Vegetable Case & Fruit Case

- Pull forward and lift up a little to remove.

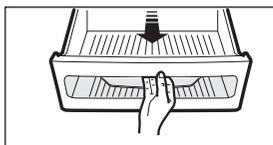


3 Freezer & Refrigerator Pockets

- Hold both ends and pull up.

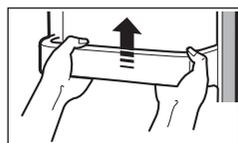


6 Wine Shelf

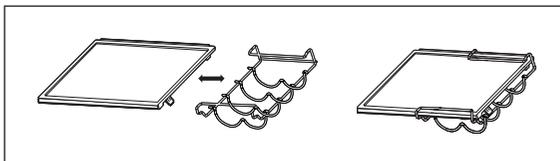

How to Clean


Interior Parts

- Use cloth with water and mild detergent to clean.

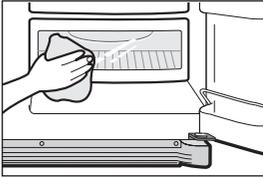

Back (Machine section)

- Remove dust on grill with a vacuum cleaner at least once a year.

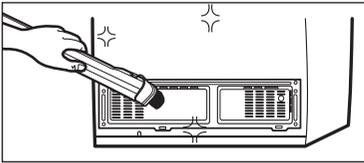


Caution

Never use petrol, benzene, thinners, scouring pads or harsh abrasives, for they can damage the surfaces.



Before You Call for Service...

Please checkup the following troubleshooting tips before you call for service!

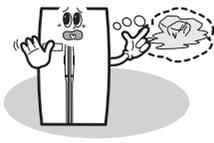

Problem

It never gets cold inside. Freezing & refrigerating is not so good.

Checkup Point

- ① Is the refrigerator unplugged?
- ② Is the temperature set to [Low Mode]?
- ③ Is the refrigerator under direct sunlight or is a heat appliance placed near it?
- ④ Is the space between the refrigerator back and the wall too close?

Action

- ① Plug in the refrigerator.
- ② Set the temperature mode to Middle or High.
- ③ Move to a place where there is no direct sunlight, no heat appliances around.
- ④ Keep sufficient space (more than 10cm) between the back of the refrigerator and the wall.



Problem


Foods in the refrigerator get frozen.

Checkup Point

- ① Is temperature set to [High]?
- ② Is the room temperature too low?
- ③ Is food with moisture stored close to the cold air spout ?

Action

- ① Set the temperature to [Middle] or [Low].
- ② Foods can be frozen if ambient temperature is below 5°C. Move to a place where the temperature is over 5°C.
- ③ Place foods with moisture on the shelves close to the doors.

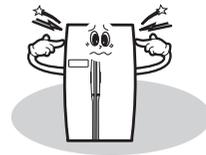

Problem

Strange sounds from the refrigerator.

Checkup Point

- ① Is the floor beneath the refrigerator uneven?
- ② Is the space between refrigerator back and the wall too close?
- ③ Do any objects or other stuff touch the refrigerator?

Action

- ① Move the refrigerator to a level and even floor.
- ② Keep sufficient space.
- ③ Remove any object which touches the refrigerator.



Problem

Odour or unpleasant smell from the inside.


Checkup Point

- ① Is the food stored uncovered or unwrapped?
- ② Are the shelves and pockets stained with food stuff?
- ③ Is the food stored too long?

Action

- ① Be sure to cover and wrap the foods.
- ② Clean them regularly. Once smell gets soaked into those parts, it is not easy to remove.
- ③ Do not store foods for too long. A refrigerator is neither a perfect nor a permanent food keeper.

Something strange? Don't worry. Here is the answer.


	Case	Explanation
Heat	Front and side of refrigerator feels warm or hot. 	<ul style="list-style-type: none"> ● Pipes (refrigerant vessel) are placed beneath the surface to prevent moisture forming on it.
Door is sticky	Doors do not open easily. 	<ul style="list-style-type: none"> ● When you close the door and then open again immediately, the door is not easy to open. Warm air rushes into the inside to create the pressure difference. In this case wait for a minute, then it will open easily.
Strange Sound	It sounds like water is flowing from the refrigerator. 	<ul style="list-style-type: none"> ● When the compressor starts to run or stops, refrigerant which makes the inside cold flowing in the pipes can make such a sound. ● Defrosted water can also make such a sound. (This refrigerator adopts an automatic defrosting system.)
	Cracking or clicking sounds. 	<ul style="list-style-type: none"> ● Inside parts shrink and/or expand due to temperature change --- When the inside gets cold or when the door is open, such sounds can be made.
	Humming or buzzing sounds.	<ul style="list-style-type: none"> ● Compressor or fans for cold air circulation can make such working sound. (If the refrigerator is not level, the sound can be louder.)
Frost & Dew	Dew or frost on the wall and/or food container surface in the freezer and refrigerator compartment. 	<p>Frost and/or dew can be made in the following cases;</p> <ul style="list-style-type: none"> ● High temperature and/or high humidity around the refrigerator. ● When doors are open too long. ● Foods with much moisture are stored uncovered or unwrapped. <ul style="list-style-type: none"> ※ You can see the same appearance when cold water is poured in a glass cup and dew is forming on the surface of it.
	Dew on the cabinet surface.	<ul style="list-style-type: none"> ● If it is highly humid around the refrigerator, moisture in the air sticks to the surface to form dew.

Installation Preparation

Check if the refrigerator can pass a doorway or enter a door first.


Dimensions (including Door Handles)

(Width*Depth*Height) 906mm×735mm×1770mm

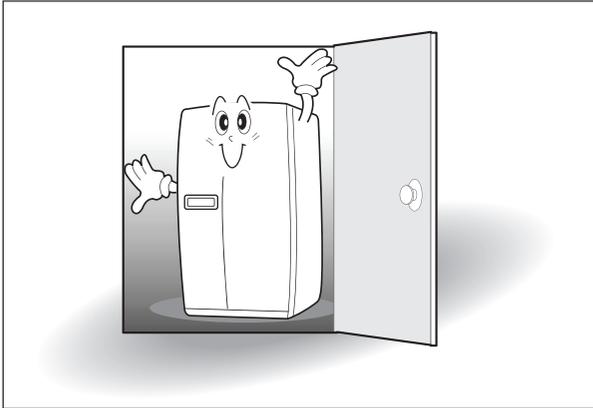


Find a suitable place to install

Sufficient space from the back of refrigerator to the wall for free air ventilation.

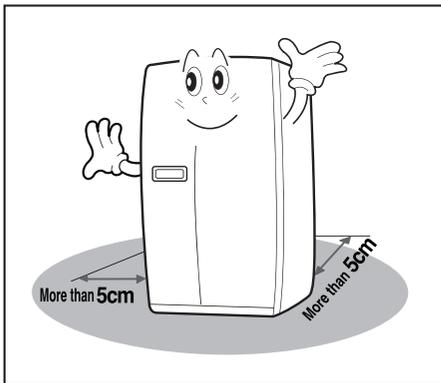

Avoid direct sunlight.

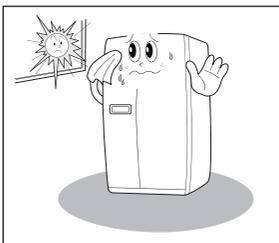

- Once the installation place is ready follow the installation instructions.
If the surrounding temperature of refrigerator is low (below 5°C), foods can be frozen or the refrigerator can function abnormally.


If the refrigerator can not pass through a door during installation, follow these steps.

(This guide refers to several models. The real features are model dependent.)


Removing Freezer Door

※ Remove front bottom cover first, if it is attached.


- 1 Pull out bending tube guide and the left water tube. (Dispenser modes only)




- 2 Unscrew top hinge cover with a screw driver.

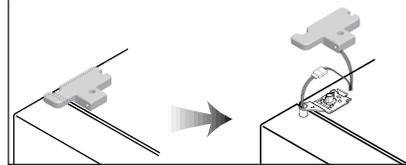


- 3 Turn top hinge fastener counterclockwise 3~4 times. Disconnect the harness wires.

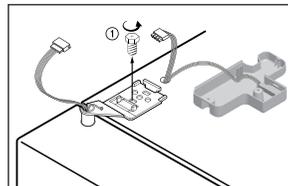

- 4 Lift up the front of hinge to remove. (After the hinge is removed the door can fall down forward. Be careful!)

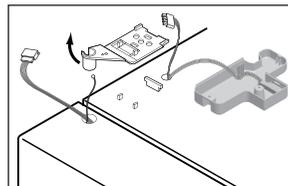


- 5 Be careful not to damage the water line when removing the door.

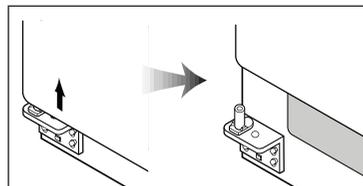


Removing Refrigerator Door


- 1 Unscrew top hinge cover with a screwdriver.
Insert a thin screwdriver into the side groove of the cover to remove.

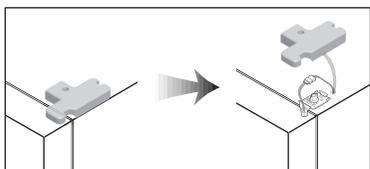

- 2 Turn top hinge fastener counterclockwise 3-4 times.
Disconnect harness wires (model dependent).

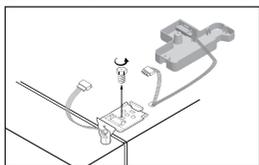


- 3 Lift the door straight up to remove.

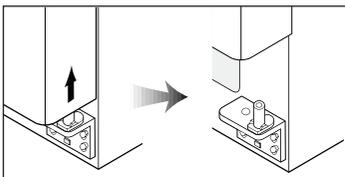


Replacing Freezer Door


- 1 Insert the water tube into the hole of the bottom hinge pin first.

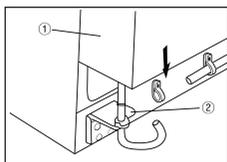


- 2 Let the top of door close to the cabinet and insert the top hinge pin to the top hole of freezer door.
(Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

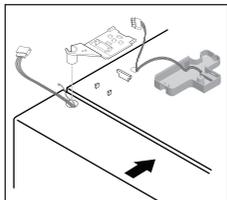

- 3 Turn the hinge fastener tightly to the end.
Connect harness wirings and screw down the ground wire.

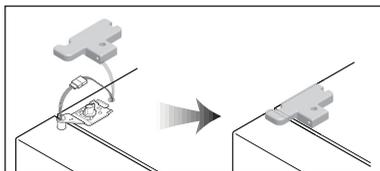


- 4 Fasten the bending tube guide and insert the water tube far into the coupling. (Dispenser models only)

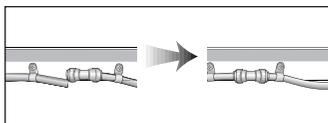


Replacing Refrigerator Door


- 1 Insert the bottom hole of refrigerator door straight into the bottom hinge pin.

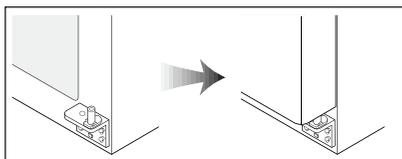

- 2 Let the top of door close to the cabinet and insert the top hinge pin to the top hole of refrigerator door.
(Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

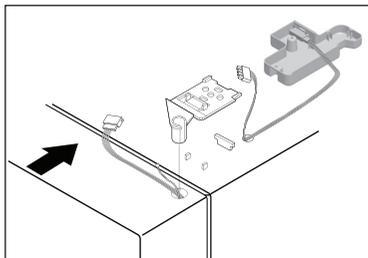

- 3 Turn the hinge fastener tightly to the end.
Connect harness wirings (model dependent) and screw down the ground wire. Click and screw the top hinge cover.

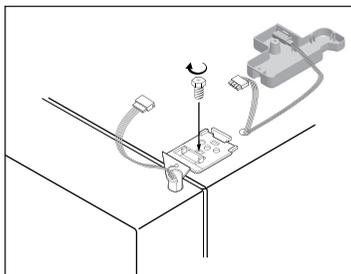


Refrigerator Leveling & Door Adjustment (If needed)

The refrigerator must be level in order to maintain optimal performance and desirable front appearance. (If the floor beneath the refrigerator is uneven, the freezer and refrigerator doors look unbalanced.)



In case freezer door is lower than refrigerator door...

- 1 Insert a screw driver (flat tip) into a groove of the left wheel (bottom of freezer) and turn it clockwise until the door is balanced. (Clockwise to raise freezer door, counterclockwise to lower.)

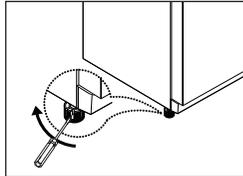

※ If the freezer door is not balanced by step 1, then follow the next steps.

- 2 Open the doors, unscrew the front cover and remove, if it is attached.

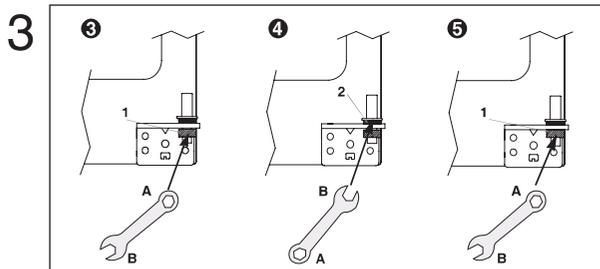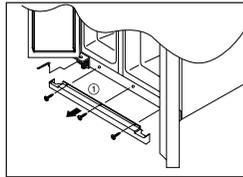


Insert a spanner (A part) into the hinge nut (1 part) and unscrew the nut by turning clockwise.

- 4 Insert a spanner (B part) into the hinge nut (2 part) and turn clockwise to lower the door.

- 5 If the door is aligned, fasten the nut (1) tightly by turning counter-clockwise.

In case refrigerator door is lower than freezer door...


- 1 Insert a screw driver (flat tip) into a groove of the right wheel (bottom of refrigerator) and turn it clockwise until the door is balanced. (Clockwise to raise refrigerator door, counterclockwise to lower.)

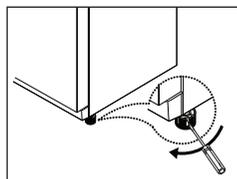

※ If the refrigerator door is not balanced by step 1, then follow the next steps.

- 2 Insert a spanner (A part) into the hinge nut (1 part) and unscrew the nut by turning clockwise.

- 3 Insert a spanner (B part) into the hinge nut (2 part) and turn counter-clockwise to tighten the door.

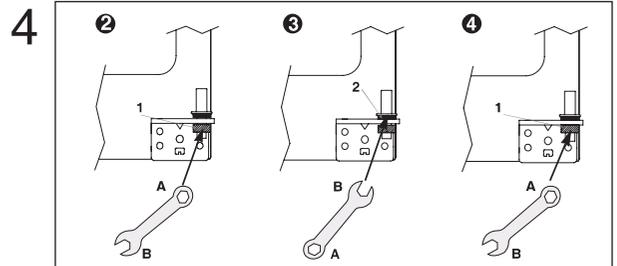

If the door is aligned, fasten the nut (1) tightly by turning.

Front Cover


After installation and/or door leveling, fasten front cover with screws. (Remove the screws on the front bottom panel first. Click and screw the cover.)




Caution

- The front of refrigerator needs to be just a little higher than the back for easy door closing, but if the wheel is raised too much for door balance, i.e. the front of refrigerator is much higher than the back, it can be difficult to open the door.

Water filter

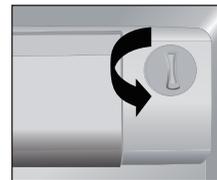

1. Remove the locking cap for installing the filter. (The ice and water dispenser can also be used without a water filter, in which case the locking cap must be used.)

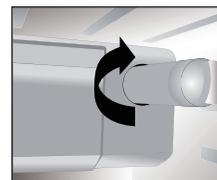

2. Carefully turn the filter clockwise.
3. Change the filter at least every 6 months.

※ A New filter can be obtained from aftersales service.

Caution



- Wipe up with cloth if droplets fall when exchanging a filter.

Information concerning the water filter


- After use, the water system is subject to low pressure. Proceed with caution when removing the filter.
- Flush the water system if the appliance has not been in use for a lengthy period, or if the ice/water has an unpleasant taste or smell. To do this, dispense water through the water dispenser for several minutes. If the unpleasant taste or smell remains, replace the filter.
- Protect from frost, remove the filter cartridge if you expect the temperature to drop below freezing.
- If pressure surges could occur in the water pipe. Do not install the water filter without a suitable surge eliminator. Contact an installation expert if you are not sure whether pressure surges could occur in the water pipe.
- After installing a new filter:
Discard any ice produced in the first 24 hours after switching on.
- If no ice has been removed for a lengthy period: Empty the ice box and discard any ice produced over the next 24hours.

How to install Water Line (Dispenser models only)


1. The water pressure should be 2.0~12.5 kgf/cm² (1.96 ~12.26 Bar) or more to run the automatic icemaker. Checkup your tap water pressure ; if a cup of 180cc is full within 10 seconds, the pressure is OK.
2. When installing the water tubes, ensure they are not close to any hot surfaces.
3. The water filter only filters water ; it does not eliminate any bacteria or microbes.
4. If the water pressure is not so high to run the icemaker, call the local plumber to get an additional water pressure pump.
5. The filter life depends on the amount of use. We recommend you replace the filter at least once every 6months.
6. After installation of refrigerator and water line system, select [WATER] on your control panel and press it for 2~3 minutes to supply water into the water tank and dispense water.
7. Use sealing tape to every connection of pipes/tubes to ensure there is no water leak.
8. The water tube should be connected to the cold water line.

WATER SUPPLY KIT


- ※ Check the parts below for installing water supply. Some other necessary parts are available at your local service agents.

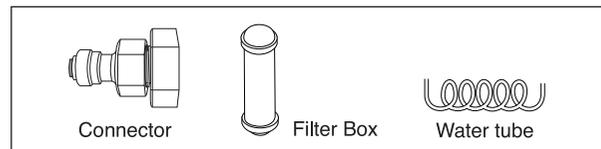

Installation Procedure (Dispenser models only)

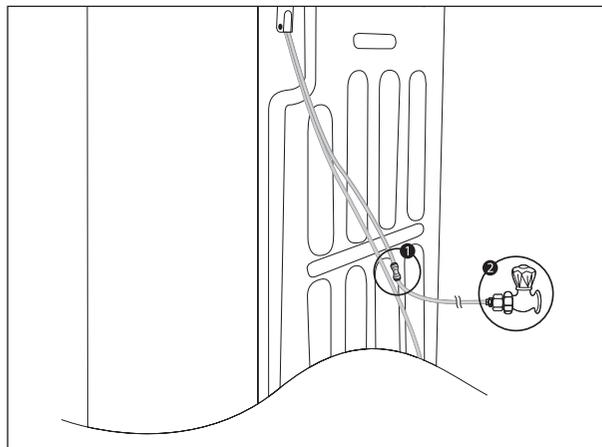

1. Connecting the appliance



2. Connecting the tap water line

Figure A


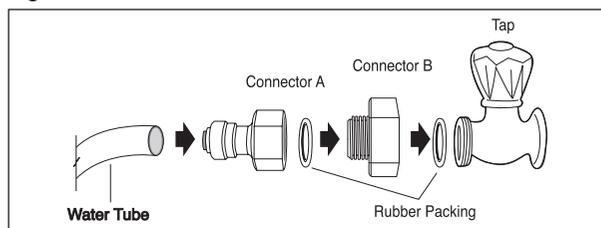


Figure B

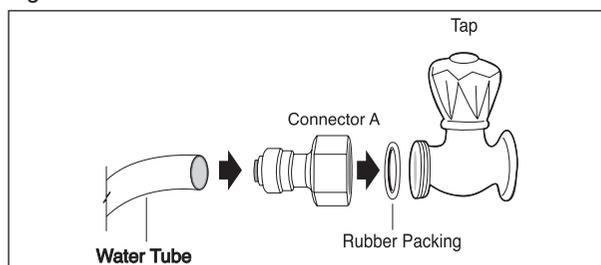

Place the rubber washer inside the tap connector and screw onto the water tap.